

Economical bolt-on generator output breaker solution
 Direct mount on connection box (right or left side)
 Space saving installation reduces engineering & labor cost
 One part number solution for complete assembly
 No measuring, drilling, cutting or fabricating required


3-Pole Eaton
 Breaker

430
 Frame

K9 SERIES Breaker Box

ALTERNATOR SIZE	BREAKER AMPERAGE	BREAKER ASSEMBLY PART NUMBER	DESCRIPTION	OPTIONAL WIRE KIT
430 CSL or RSL Frame	50 amp	BK-430M-50A	430 FRAME 50 AMP ASSY	WK-150AMP
430 CSL or RSL Frame	60 amp	BK-430M-60A	430 FRAME 60 AMP ASSY	WK-150AMP
430 CSL or RSL Frame	100 amp	BK-430M-100A	430 FRAME 100 AMP ASSY	WK-150AMP
430 CSL or RSL Frame	125 amp	BK-430M-125A	430 FRAME 125 AMP ASSY	WK-150AMP
430 CSL or RSL Frame	150 amp	BK-430M-150A	430 FRAME 150 AMP ASSY	WK-150AMP
430 CSL or RSL Frame	175 amp	BK-430M-175A	430 FRAME 175 AMP ASSY	WK-250AMP
430 CSL or RSL Frame	200 amp	BK-430M-200A	430 FRAME 200 AMP ASSY	WK-250AMP
430 CSL or RSL Frame	225 amp	BK-430M-225A	430 FRAME 225 AMP ASSY	WK-250AMP
430 CSL or RSL Frame	250 amp	BK-430M-250A	430 FRAME 250 AMP ASSY	WK-250AMP
430 CSL or RSL Frame	300 amp	BK-430M-300A	430 FRAME 300 AMP ASSY	WK-400AMP
430 CSL or RSL Frame	400 amp	BK-430M-400A	430 FRAME 400 AMP ASSY	WK-400AMP(2)
430 CSL or RSL Frame	500 amp	BK-570M-500A	430 FRAME 500 AMP ASSY	WK-800AMP
430 CSL or RSL Frame	600 amp	BK-570M-600A	430 FRAME 600 AMP ASSY	WK-800AMP
430 CSL or RSL Frame	700 amp	BK-570M-700A	430 FRAME 700 AMP ASSY	WK-800AMP
430 CSL or RSL Frame	800 amp	BK-570M-800A	430 FRAME 800 AMP ASSY	WK-800AMP
430 CSL or RSL Frame	1000 amp	BK-570M-1000A	430 FRAME 1000 AMP ASSY	WK-1200AMP
430 CSL or RSL Frame	1200 amp	BK-570M-1200A	430 FRAME 1200 AMP ASSY	WK-1200AMP
<i>Note: For standard Marathon connection boxes only. Bus bar connection kits available for RSL alternators.</i>			800 AMP BUS BAR & ISOLATOR KIT	BBK-800AMP
			1600 AMP BUS BAR & ISOLATOR KIT	BBK-1600AMP

Black painted steel enclosure with a Marathon 430 frame side plate hole pattern, which contains an Eaton generator molded case circuit breaker and a connection wiring pass-through hole above the breaker for convenient routing to the generator leads or a link board assembly. Neutral and Ground terminals are mounted in the enclosure.

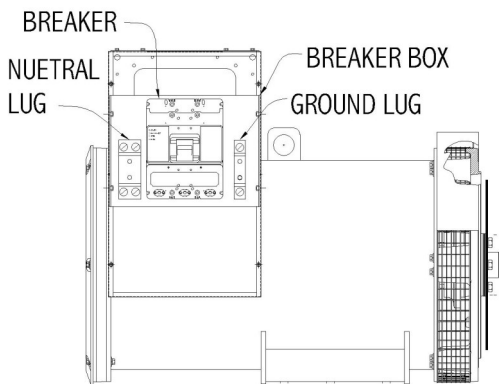

BREAKER BOX MAY BE MOUNTED ON EITHER
 SIDE OF ALTERNATOR
 430CSL FRAME SIDE VIEW

Wire Kit leads are approximately 36" with ring terminals.

The breaker is mounted in the enclosure for shipping and requires temporary removal of the faceplate and breaker for installation on the generator end.

Marathon connection box side plate hardware is reused for mounting the breaker assembly. No additional hardware needed.

Eaton breaker accessories (auxiliary switches & shunt trips) are available as a loose part for field installation.



839 Bill France Boulevard, Daytona Beach, FL 32117
 Phone: (386) 274-2079 Fax: (386) 274-2279
www.davidsonsales.com